


If you have some kind of problem with the Chromebook.
This is how you reboot it

Plug AC adapter in
Hold power button down for 5 sec
Let go off power button
Press power button

Or hard reset

Press Refresh  and power button together.
Refresh button is 4 button on top if you start from the left side. A circle with an arrow