







DELL CHROMEBOOK HANDOUTS  
GETTING TO KNOW YOUR CHROMEBOOK



Component	Description
 (1) Webcam	Records video, captures still photographs, and allows you to video conference and chat online using streaming video.
 (2) Internal Microphone	Records sound.
 (3) Touch Pad	Moves the on-screen pointer and selects or activates items on the screen.


DELL CHROMEBOOK HANDOUTS  
GETTING TO KNOW YOUR CHROMEBOOK



Component	Description
 (4) AC Power Connector	Connects an AC adapter.
(5) Micro Secure Digital (SD) Memory Card Slot	Insert optional SD Memory Card
 (6) HDMI Port	Using a HDMI Cable, display what is on the screen to a monitor or TV.
 (7) 2 High Speed USB 3.0 Ports	Connect optional USB 2.0 or 3.0 compatible device

DELL CHROMEBOOK HANDOUTS  
GETTING TO KNOW YOUR CHROMEBOOK




Component	Description
 (1) Headphone Jack	Produces sound when connected to optional powered stereo speakers, headphones or earbuds.





# DELL CHROMEBOOK HANDOUTS

## GETTING TO KNOW YOUR CHROMEBOOK

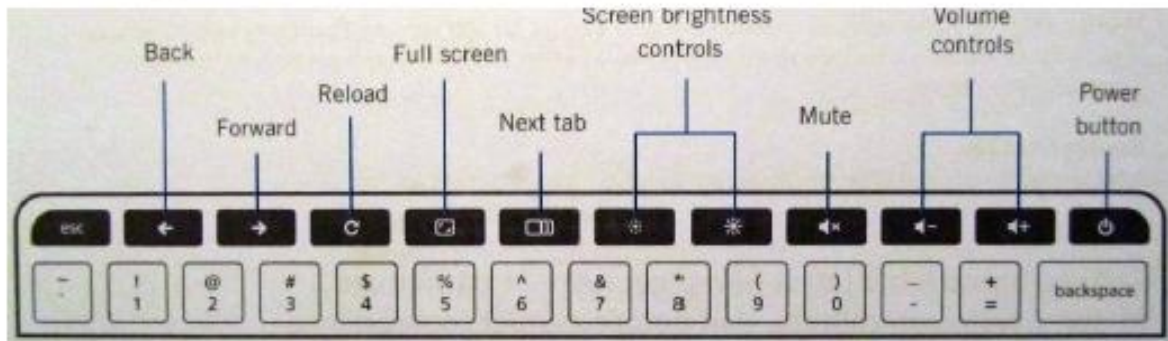

### Using the action keys



Icon	Key	Description
	F1	Go to the previous page in your browser history.
	F2	Go to the next page in your browser history.
	F3	Reload your current page.
	F4	Open your page in full-screen mode.
	F5	Switch to your next window.
	F6	Decreases the screen brightness incrementally as long as you hold down the key.
	F7	Increases the screen brightness incrementally as long as you hold down the key.
	F8	Mutes or restores speaker sound.
	F9	Decreases speaker volume incrementally as long as you hold down the key.
	F10	Increases speaker volume incrementally as long as you hold down the key.