

Projector

Make sure you have the input source is set to the correct VGA input. Some projectors have buttons on top to change the source/input. Usually called Computer or Computer 1. If using a doc cam then make sure it's set to the correct output.



Back of the monitor



Kramer VGA Splitter



 
Back of the computer



VGA INPUT



VGA IN VGA OUT



Back of the document camera



Document Camera

Use the INT/EXT button OR CAMERA/PC button on top of the Doc Camera to switch between PC to Document Camera mode