

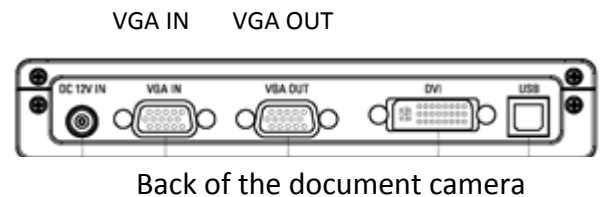


Projector Wall Box

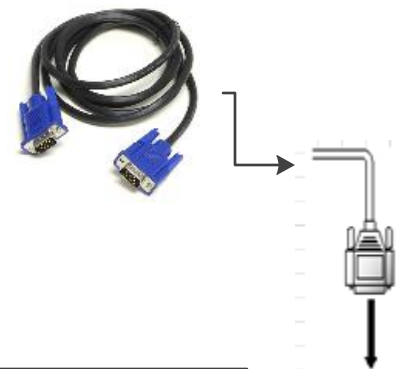

Back of the monitor

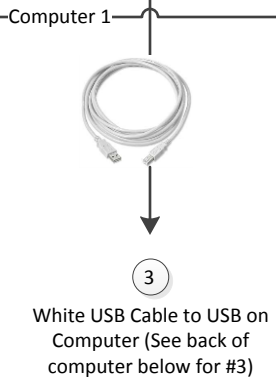

Kramer VGA Splitter



Back of the computer



VGA INPUT



Document Camera
Use the INT/EXT button OR CAMERA/PC button on top of the Doc Camera to switch between PC to Document Camera mode