

5. Audio Cable (White Cable in Picture) goes from Green Port on Back of Computer to the Wall Plate with the Green Network Drop.



Wall Plate

Use Gold Plated VGA Cable



4. VGA CABLE from 2<sup>nd</sup> VGA Port on the Document Camera goes into the VGA Port on the Wall Plate




6. Network Cable goes from Green Port on Wall Plate to USB Extender (plugs into USB port on the computer)

Coaxial cable goes into the wall for Cable TV and the other end into the Cable Input box



VGA IN VGA OUT

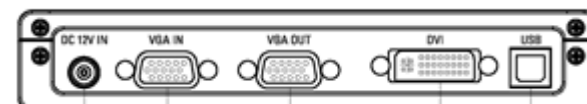

Back of the document camera

Back of the monitor



2. VGA CABLE From Rear of Monitor/ Computer Screen goes into Port Labeled MONITOR on Kramer Box

Back of the computer



3. VGA CABLE from 1<sup>st</sup> VGA Port on Document Camera goes into the VGA Port Labeled PROJECTOR on the Kramer Box.



Cable Input/VGA box

1. VGA CABLE from Back of Computer goes into Port Labeled PC on Kramer Box.



Document Camera