

Computer, Projector, Document Camera Hook Up

1. VGA CABLE from Input on Kramer Box goes into the 1st VGA Port on the Document Camera. (Picture has Cable labeled as Comes Out!)



- 2. VGA CABLE from Output 1 on Kramer Box goes to Back of Monitor/Computer Screen.



3. VGA CABLE from 2nd VGA Slot on Document Camera goes into the Rear of Computer. (Picture has Cable labeled as RGB)



4. VGA CABLE from Output 2 on Kramer Box goes into 2nd VGA Slot on the A/V Box. (Light Gray Cable in Picture)



5. VGA CABLE in 1st VGA Port on A/V Box goes to the VGA Port on the Wall Plate.



6. Audio Cable (White Cable in Picture) goes into the Green Port on Back of Computer and into the Wall Plate (Small Black Cable in Picture) above the VGA Port (Big Black Cable in Picture) and under the Green Network Port (Blue Cable is Plugged into it in picture).



